

acaia

GET STARTED

#weightobrew

To prevent damage during transit,  
please use the original packaging for returns.

[acaia.co](http://acaia.co)



## TURN ON/OFF

[Press] Power Button to **turn on** device.

[Double Tap] Power Button to **turn off** device.



## DOSING


[Press] Dose Button to **start dosing**. Press again to manually **stop dosing**. At the end of each dose, press this button again to dose 1-2 beans.

[Press and hold for five seconds] Dose Button to **empty hopper**. Press Dose Button to **reset dose**.



## DIAL INTERFACE

[Rotate] Dial to **toggle presets, switch modes, or adjust preset weights**.

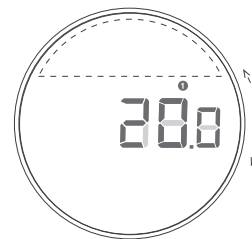


## ADJUST PRESET WEIGHTS

[Press] Power Button to **enter preset weight setting**.


[Rotate] Dial to **change value**.

[Press] Power/Dose Button to **save preset value**.

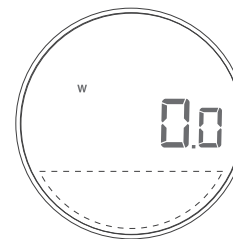

## WEIGHING SCALE MODE

[Press] Dose Button to **tare weight**.

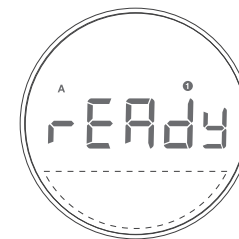

## AUTO DOSING MODE

[Press and hold for five seconds] Power Button to **select Auto mode** with the Dial.

[Press] Power Button again to **confirm mode**.

[Press] Dose Button to **enter Ready mode**. You can then begin auto-tare and auto-dosing.